
DVD HOME THEATER SYSTEM (Front TV only) -If Equipped



The available DVD home theater system operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The TV is connected to the home theater system, which plays through theater speakers in the lounge area of the coach.

Set TV Video Input

- Turn TV and DVD player On.
- Press INPUT button on front of TV and select "VIDEO 1" input.




TV screen will display DVD player logo when correct input is selected.



Play DVD with Theater Sound

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show "READING" or "LOADING".
- DVD may load directly to main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button until you see the main menu screen.
- When main menu screen appears, use arrow buttons on remote to select desired entry or press ENTER or PLAY buttons on remote (or "Play" button on DVD player) to begin playing feature.
- Volume is adjusted with remote (or volume buttons on DVD player).

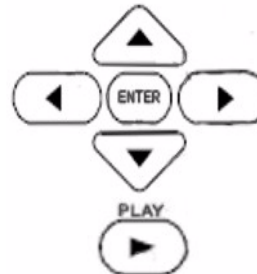

TV Sound through Home Theater Speakers

When watching TV programs alone, the TV normally plays sound through its own built-in stereo speakers. If you wish to connect TV stereo sound output to the home theater speakers for a richer sound quality, follow these steps:

- Follow DVD home theater steps for power and TV input setup.
- Turn TV and DVD player On.
- Press FUNCTION button on DVD player or remote to set DVD player to "AV IN".
- Use TV Menu button to set TV audio output to "Variable Audio Output" (see TV owner's manual.) This routes TV stereo sound output through home theater system.
- Select TV channels and adjust volume with remote for either the TV or DVD.

NOTE: Turn the volume level up significantly on the DVD player when using the home theater as an amp for the TV through the stereo system.

DVD PLAYER, SIDE – 12-VOLT (available with 19" Side TV only) -If Equipped



The 12-volt slot-load DVD player is connected to the TV, which plays through the TV stereo speakers.

Provide 12V Power

The TV and DVD player both run on 12-volt DC current.

- Turn on 12-volt master power switch (located on the underside of the video cabinet).

NOTE: When TV or DVD are not in use, power switch should be turned off to avoid drain on 12-volt house battery..



Set TV Video Input

- Turn TV and DVD player On.
- Press TV/VIDEO or INPUT



- button on the TV remote to select "INPUT 1". The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show "READING" or "LOADING".
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be

able to skip previews if desired by pressing the "Next Track" button until you see the main menu screen.

- When the main menu screen appears, use the arrow buttons on the remote to select the desired entry or press the ENTER or PLAY buttons on the remote or DVD player to begin playing the feature.
- Volume is adjusted using the remote for either the TV or DVD.



Audio-Video System Basic Operation Guide

ACCESS

Impulse

NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-09-002
0902090427

Copyright 2008 Winnebago Industries, Inc.
All rights reserved.