

DVD PLAYER



The DVD player is connected to the TV and plays through the TV stereo speakers or the deluxe sound rear radio speakers in the lounge area of the coach.

Provide 12V Power

The 19" TV and DVD player operate on 12-volt DC current.

- Turn on the 12-Volt Master Power (TV) switch, located in the video cabinet near the TV.

NOTE: When the TV is not in use, the TV Master Power switch should be turned off to avoid drain on the 12-volt house battery.



Set TV Sound Output

- Use the TV Menu button to set TV audio output to Variable Audio Output. (See TV owner's manual for

instructions.) This will connect TV stereo sound output to the deluxe speakers in the lounge area.


- Volume is adjusted with the TV remote or volume buttons.

Set TV Video Input


- Turn TV and DVD player on.
- Press the SOURCE button on the TV or TV remote to select "INPUT 1."
- The TV screen will display the DVD player logo when the correct input is selected.

Play DVD

- Insert DVD into player. DVD will begin to 'load' automatically. TV screen will typically show "READING" or "LOADING."
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the "NEXT" button until you see the main menu screen.

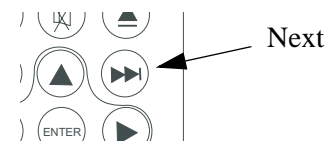

- When the main menu screen appears, use the arrow buttons on the DVD remote to select the desired entry or press the ENTER or PLAY buttons on the remote (or "Play" button on DVD player) to begin playing the feature.

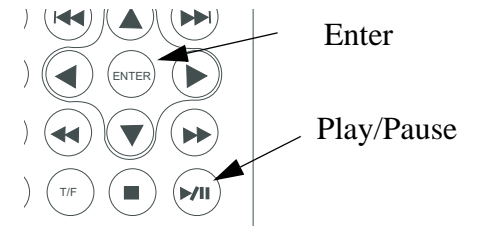

- Volume is adjusted with the DVD remote (or volume buttons on DVD player)

Further Information

For further information and operating instructions, see the manufacturer's information included in your InfoCase.

Audio-Video System Basic Operation Guide

Chalet D-Series Class-A

*NOTE: See your InfoCase for specific
operating guides for audio and
video components.*



Part No. 161501-09-016
0902080331
Copyright 2008 Winnebago Industries, Inc.
All rights reserved.