
DVD HOME THEATER SYSTEM

-If Equipped



The available DVD home theater system operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The TV is connected to the home theater system, which plays through theater speakers in the lounge area of the coach.

Connect Theater Speakers

- Press the **SPEAKERS** switch on the dash to TV position to connect the theater speakers to the home theater system.



NOTE: The Aux. Battery Disconnect switch must also be on while listening to theater sound because the audio relay is powered by house batteries. If the Aux. Battery Disconnect switch is off, the speakers will not emit any sound.

Set TV Video Input

(If equipped with one main TV)

- Turn On both TV and DVD player.
 - Press **SOURCE** or **INPUT** button on the remote or front of TV and select “Component” input on the TV.
- The TV screen will display the DVD player logo when the correct input is selected.




(If equipped with 2nd main TV)

- Turn on the TV's, DVD player, and Video Selection box. (Switch the Video Selection box to DVD for the TV's that you are going to use).
 - Press **SOURCE** or **INPUT** button on TV remotes or side of TV's and select “Component” input on the TV's.
- Both TV's will display the DVD player logo when the correct input is selected.



Play DVD with Theater Sound

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show “READING” or “LOADING.”
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the “NEXT” button until you see the main menu screen.
- When the main menu screen appears, use the arrow buttons on the remote to select the desired entry or press the **ENTER** or **PLAY** buttons on the remote (or “Play” button on DVD player) to begin playing the feature.
- Volume is adjusted with the DVD remote (or volume control on DVD player).

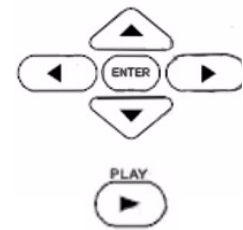

TV Sound through Home Theater Speakers

When watching TV programs (broadcast, cable or satellite), the TV normally plays sound through its own built-in stereo speakers. To connect TV sound output to home theater speakers

for a richer sound quality, follow these steps:

NOTE: The largest TV is the only TV with an audio output connection to the DVD player.

- Press SPEAKERS switch on dash to TV position (if equipped).
- Turn the TV and DVD player On.
- Select the TV channel you wish to watch.
- Press FUNCTION button on DVD player or remote to set DVD player to “AV IN.”
- Use the TV Menu button to turn on of off TV speakers, or if available, set TV audio output to “Variable Audio Output.” (See TV owner’s manual for instructions.) This will route TV stereo sound output through the home theater system.
- Select TV channels and adjust theater speaker volume with remote for either the TV or DVD.

NOTE: Turn the volume level up significantly on the DVD player when using the home theater as an amp for the TV through the stereo system.

Dash Radio Sound through Home Theater Speakers –If Equipped

See “Radio – In-Dash” in Section 3.

Audio-Video System Basic Operation Guide

Journey
Meridian
ITASCA

NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-09-012
0903090427

Copyright 2008 Winnebago Industries, Inc.
All rights reserved.