

---

---

## DVD HOME THEATER SYSTEM

-If Equipped



The available DVD home theater system operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The TV is connected to the home theater system, which plays through the theater speakers in the lounge area of the coach.

### Connect Theater Speakers

- Press the SPEAKER switch on the dash to TV position to connect the theater speakers to the home theater system.



*NOTE: The Aux. Battery Disconnect switch must be on for theater sound because the audio relay is powered by house batteries. If the Aux. Battery Disconnect switch is off, the speakers will not emit sound.*

### Set TV Video Input

- Turn on the TV, DVD player, and Video Selection box. (Switch the Video Selection box to DVD for the TV that you are going to use).



- Press INPUT button on the remote or front of TV and select the DVD input channel on the TV.

Sony®: “Video 1 or Component 2”

Sharp®: “Input 1 or Input 2”



- The TV screen will display the DVD player logo when the correct input is selected.

### Play DVD with Theater Sound

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show “READING” or “LOADING”.
- The DVD may load directly to the main title/ menu screen or it may begin to play previews. You may be able to skip previews if desired by



pressing the chapter “advance” button until you see the main menu screen.

- When the main menu screen appears, use the arrow buttons on the remote to select the desired entry or press the ENTER or PLAY buttons on the remote (or “Play” button on DVD player) to begin playing the feature.
- Volume is adjusted with the DVD remote (or volume control on DVD player).



### TV Sound through Home Theater Speakers

When watching TV programs (broadcast, cable, or satellite), the TV normally plays sound through its own built-in stereo speakers. To connect TV sound output to home theater speakers for a richer sound quality, follow these steps:

- Press SPEAKER switch on dash to TV position.
- Turn the TV and DVD player On.
- Select the TV channel you wish to watch.
- Press FUNCTION button on DVD player or remote to set DVD player to “TV/VIDEO”.

- Use the TV Menu button to set TV audio output to “Variable Audio Output” (See TV owner’s manual for instructions.) This will route TV stereo sound output through the home theater system.
- Adjust theater speaker master volume to maximum on the DVD, then control volume with the TV remote.

### **Dash Radio Sound through Home Theater Speakers –If Equipped**

See “Radio – In-Dash” in Section 3.

## Audio-Video System Basic Operation Guide

# VECTRA Horizon

---

*NOTE: See your InfoCase for specific operating guides for audio and video components.*

